

RX®-1500i TBR®/W Quick Reference Card

Basic Operations

Press **POWER** to activate the rangefinder.

Press and release **POWER** for a single distance reading.

Press and hold **POWER** to scan, continuously updating distance readings (*recommended*).

Menu Navigation

Press and hold **MODE** for >1 second and release to enter the menu.

Press and release **MODE** to advance through the menu.

Press **POWER** to toggle functions on or off.

True Ballistic Range® Wind (TBR/W)

For Bow


Activate BOW by selecting the BOW function during set up.

Do not activate TBR as this will activate rifle cartridge settings. (See Reverse)

For Rifle

Select TBR function, and select BAS, HOLD, MIL, MOA, or TRIG. BAS displays the equivalent horizontal range, HOLD displays the inches or centimeters of holdover, MIL displays the milliradians of holdover, and MOA displays the minute of angle adjustment. TRIG menu selection provides mathematical horizontal and vertical distance along with line-of-sight distance. Press **MODE** to advance through the menu to the ballistic groups and choose group 1 through 25.

Display at a Glance

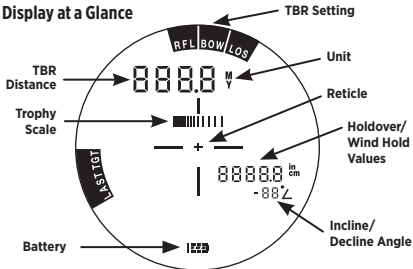

TBR/W LOAD GROUP SELECTION TABLE: FOR BEST FIT UP TO 600 YARDS

Load Group	Bullet Path Height @ 600 Yds.	10 MPH Crosswind Deflection @ 600 Yds	Sight-in Range
1	-42 to 48 inches*	10 to 28 inches	200 Yards
2	-48 to -54 inches	10 to 28 inches	200 Yards
3	-48 to -54 inches	28 to 46 inches	200 Yards
4	-54 to -60 inches	10 to 28 inches	200 Yards
5	-54 to -60 inches	28 to 46 inches	200 Yards
6	-60 to -66 inches	10 to 28 inches	200 Yards
7	-60 to -66 inches	28 to 46 inches	200 Yards
8	-66 to -72 inches	10 to 28 inches	200 Yards
9	-66 to -72 inches	28 to 46 inches	200 Yards
10	-72 TO -78 inches	10 to 28 inches	200 Yards
11	-72 to -78 inches	28 to 46 inches	200 Yards
12	-78 to -84 inches	10 to 28 inches	200 Yards
13	-78 to -84 inches	28 to 46 inches	200 Yards
14	-84 to -90 inches	10 to 28 inches	200 Yards
15	-84 to -90 inches	28 to 46 inches	200 Yards
16	-90 to -96 inches**	28 to 46 inches	200 Yards
17	-30 to -36 inches**	10 to 28 inches	300 Yards
18	-36 to -42 inches	10 to 28 inches	300 Yards
19	-42 to -48 inches	10 to 28 inches	300 Yards
20	-48 to -54 inches	10 to 28 inches	300 Yards
21	-48 to -54 inches	28 to 46 inches	300 Yards
22	-54 to -60 inches	10 to 28 inches	300 Yards
23	-54 to -60 inches	28 to 46 inches	300 Yards
24	-60 to -66 inches**	10 to 28 inches	300 Yards
25	-60 to -66 inches**	28 to 46 inches	300 Yards

* If your bullet height path is less than -42 inches at 600 yards with a 200 yard sight-in, then consider sighting-in at 300 yards and selecting load group 17 or 18. Alternately, you can use group 1 with a 200 yard sight-in, but the TBR/W will be less accurate.

** If your bullet height at 600 yards is greater than -96 inches with a 200 yard sight-in, or less than -30 or greater than -66 inches with a 300 yard sight-in, the TBR/W will be less accurate.